


TABLET FREETAB 7003 HD+ X2 3G+

Firmware updates >>> Android 4.0.4 ICS >>> **Version 1**

- Before updating charge the tablet
- Updates erases all data from the device
- Please carry out updating proces in accordance
- To run an update is required to use a microSD card

The first launch of the device after the update may take a little longer than normally (a few minutes), as it is connected with the installation of the components.

1. Prepare a tablet and a microSD card with a capacity of more than 256MB
2. From the following link download the file containing updated to Android 4.0.4
http://freetab.eu/softy/ENG/Tablets/FreeTAB_7003_HD_PLUS_X2_3G_PLUS/Firmware/Android_4.0.4/Version_1/ENG/Firmware_7003_android_4.0.4_version_1.zip
3. Unzip the file **Firmware_7003_android_4.0.4_version_1.zip** on computer disk drive, a folder named Firmware_7003_android_4.0.4_version_1 will be created
4. Open Directory Firmware_7003_android_4.0.4, then copy the file **update.zip** on the microSD card, then put the microSD card in the tablet
5. Turn the tablet press Power and hold the button **Vol +**, while keeping the button pressed **Vol +**, wait about 15 seconds, service is started "System Recovery"
6. Select No.1 **apply sdcard/update.zip** and wait for the system

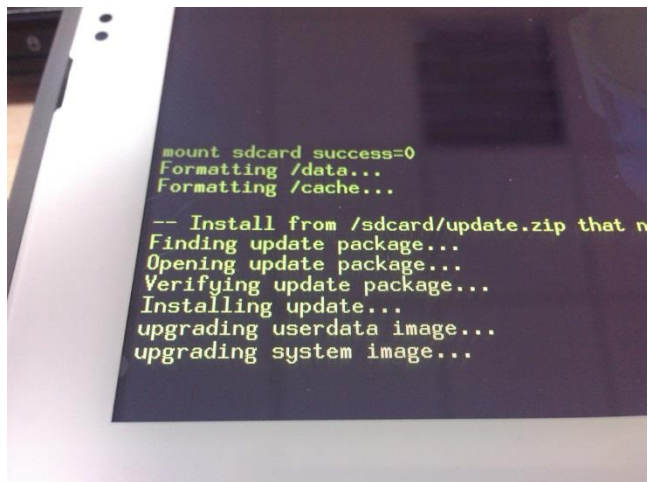

The update has been successfully installed, the system will automatically